


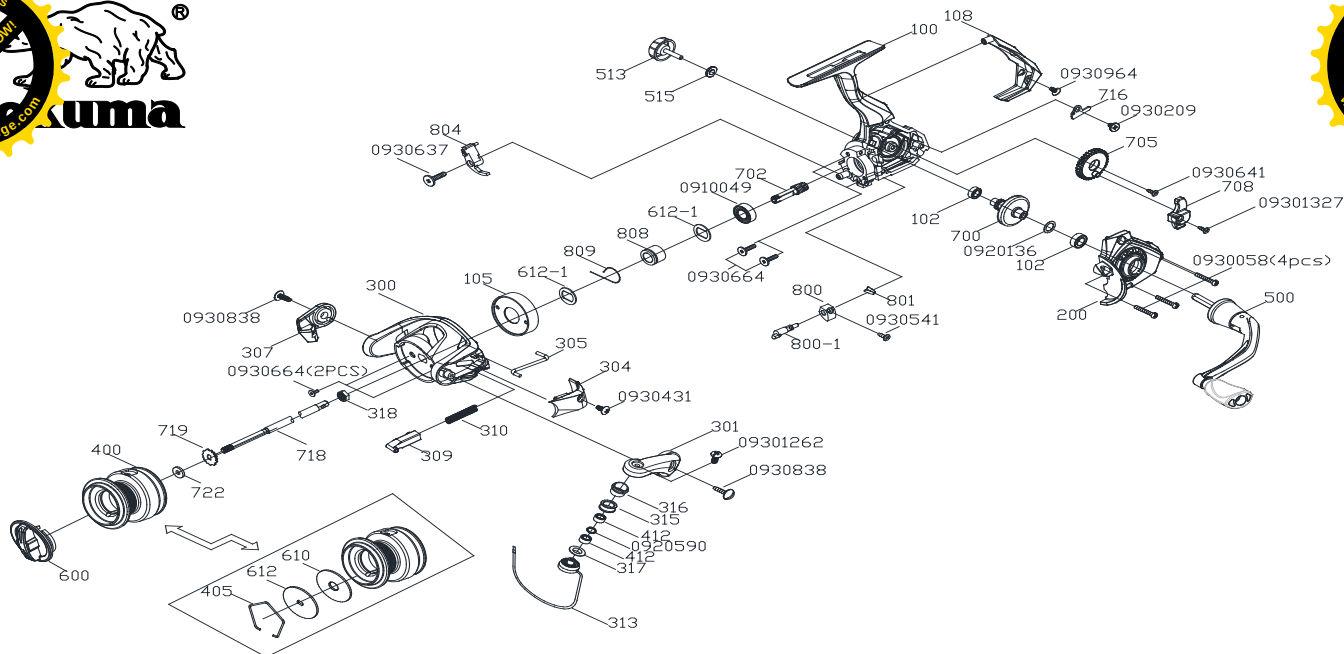

ARIA-20a-CL PARTS LIST

KEY NO	PARTS NO	PARTS NAME	KEY NO	PARTS NO	PARTS NAME
100	21004586	Main body	702	27020483	Pinion gear
102	21020004	Bushing	705	27050220	Transmission gear
105	21050129	Rotor cap	708	27080190	Oscillating slider
108	21081575	Cap	716	27160016	Oscillation slider plate
200	22004667	Side plate	718	27180804	Main shaft
300	23005235	Rotor	719	27190029	Click gear
301	23012347	Bail arm	722	27220009	Click gear washer
304	23042891	Bail arm cover	800	28000332	Anti-reverse/anti-re lever
305	23050235	Kick lever	800-1	28000345	Anti-reverse/anti-re lever
307	23071910	Bail holder	801	28010024	Anti-re lever spring
309	23090002	Bail arm slider	804	28040054	Anti-re lever pin
310	23100005	Compression spring	808	28080050	Ratchet
313	23131881	Bail wire assy.	809	28090039	Silent spring
315	23150086	Line roller	0910049	0910049	Ball bearing
316	23160014	Line roller bushing	0920590	0920590	Washer
317	23170014	Line roller washer	0920136	0920136	Washer
318	23180006	Rotor nut	0930058	0930058	Screw
400	240016103	Spool assy.	0930541	0930541	Screw
405	24050042	Drag washer retainer	0930641	0930641	Screw
412	24120038	Spool bushing	0930964	0930964	Screw
500	25006496	Handle assy.	09301327	09301327	Screw
513	25130915	Handle cap	0930209	0930209	Screw
515	25150002	Handle screw cap washer	09301262	09301262	Screw
600	26004378	Drag knob assy.	0930664	0930664	Screw
610	26100011	Drag washer	0930431	0930431	Screw
612	26120003	Key washer	0930637	0930637	Screw
612-1	26120054	Key washer	0930838	0930838	Screw
700	27000446	Drive gear			