


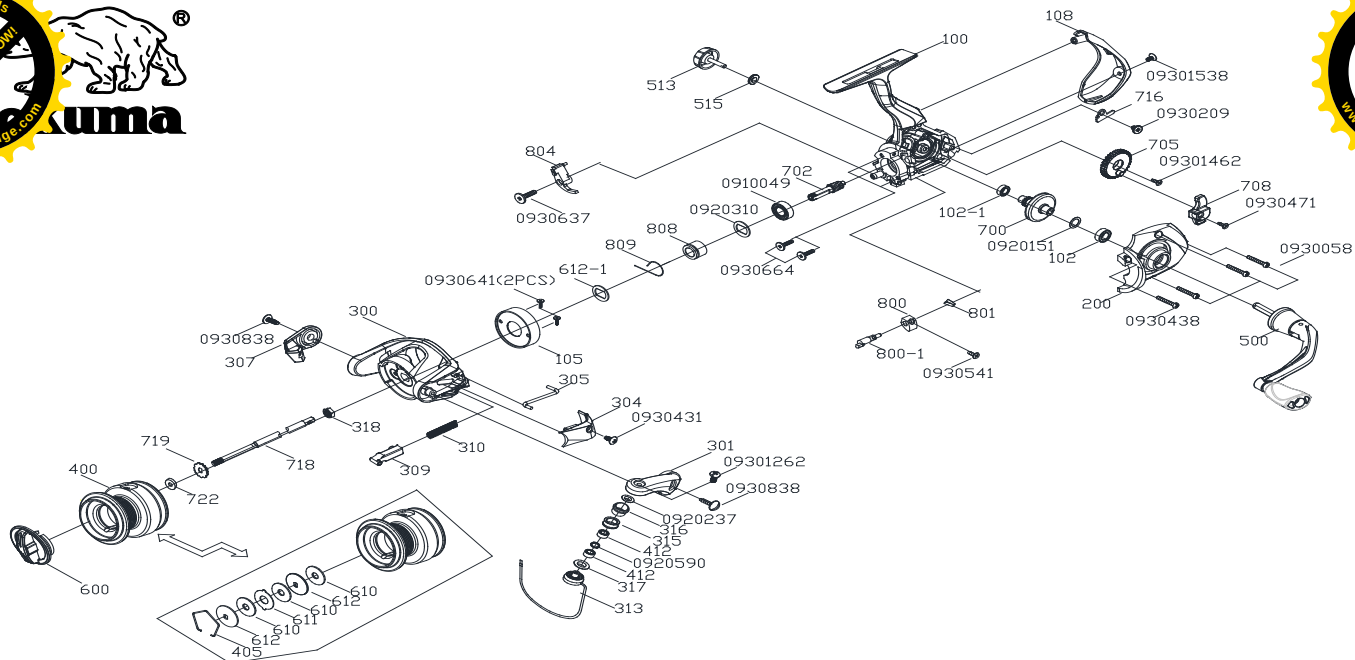

ABL-3000 PARTS LIST

KEY NO	PARTS NO	PARTS NAME	KEY NO	PARTS NO	PARTS NAME
100	21004706	Main body	705	27050143	Transmission gear
102	21020002	Bushing	708	27080121	Oscillating slider
102-1	21020004	Bushing	716	27160016	Oscillation slider plate
105	21050119	Rotor cap	718	27180732	Main shaft
108	21081568	Cap	719	27190029	Click gear
200	22007336	Side plate	722	27220009	Click gear washer
300	23005266	Rotor	800	28000437	Anti-reverse/anti-re lever
301	23015024	Bail arm	800-1	28000345	Anti-reverse/anti-re lever
304	23042877	Bail arm cover	801	28010024	Anti-re lever spring
305	23050220	Kick lever	804	28040054	Anti-re lever pin
307	23071930	Bail holder	808	28080052	Ratchet
309	23090002	Bail arm slider	809	28090039	Silent spring
310	23100005	Compression spring	0910049	0910049	Ball bearing
313	23131774	Bail wire assy.	0920310	0920310	Washer
315	23150086	Line roller	0920590	0920590	Washer
316	23160014	Line roller bushing	0920151	0920151	Washer
317	23170014	Line roller washer	0920237	0920237	Washer
318	23180006	Rotor nut	0930058	0930058	Screw
400	240016011	Spool assy.	0930541	0930541	Screw
405	24050042	Drag washer retainer	09301462	09301462	Screw
412	24120054	Spool bushing	09301538	09301538	Screw
500	25006496	Handle assy.	0930438	0930438	Screw
513	25130904	Handle cap	0930471	0930471	Screw
515	25150002	Handle screw cap washer	0930209	0930209	Screw
600	26004378	Drag knob assy.	09301262	09301262	Screw
610	26100011	Drag washer	0930664	0930664	Screw
611	26110004	Eared washer	0930641	0930641	Screw
612	26120003	Key washer	0930431	0930431	Screw
612-1	26120054	Key washer	0930637	0930637	Screw
700	27000240	Drive gear	0930838	0930838	Screw
702	27020928	Pinion gear			