


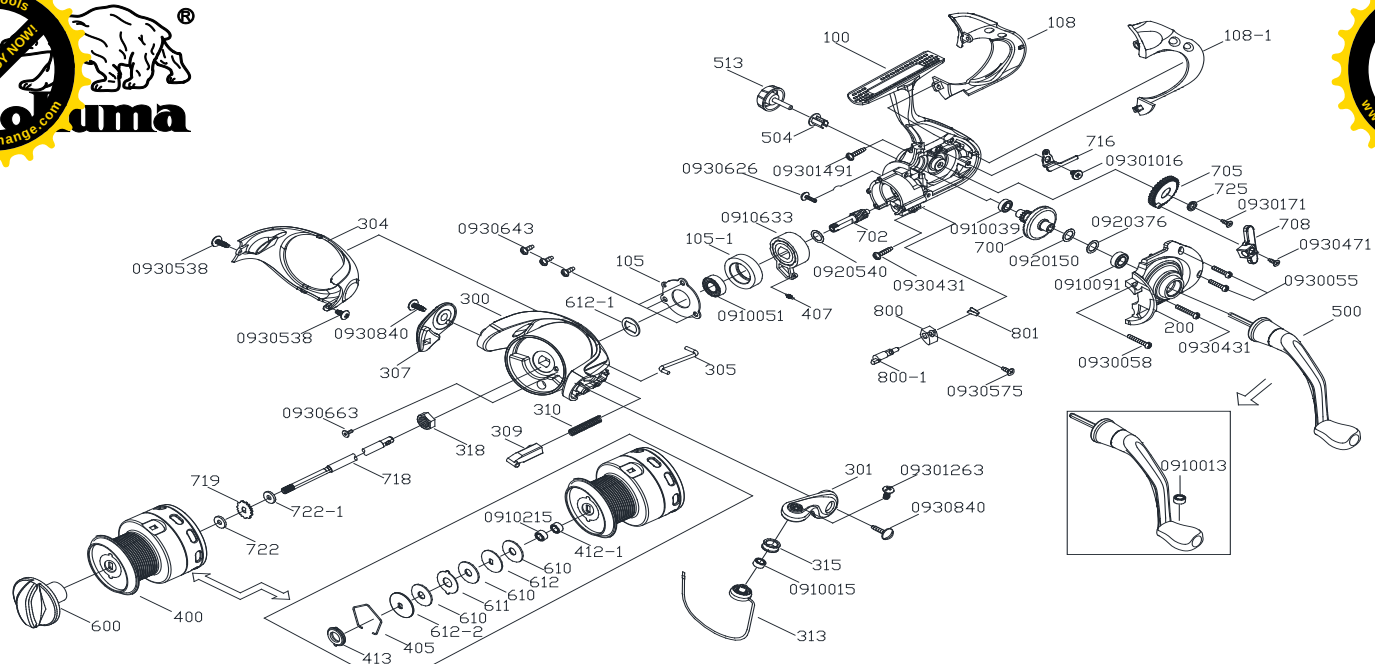

AV-30a-CL PARTS LIST

KEY NO	PARTS NO	PARTS NAME	KEY NO	PARTS NO	PARTS NAME
100	21005026	Main body	716	27160007	Oscillation slider plate
105	21050027	Pinion bearing fixed plate	718	27180500	Main shaft
105-1	21056578	Pin. bearing fixed plate	719	27190025	Click gear
108	21087033	Cap	722	27220009	Click gear washer
108-1	21087034	Cap	722-1	27220037	Click gear washer
200	22004102	Side plate	725	27250020	Transmission gear bushing
300	23004309	Rotor	800	28000242	Anti-reverse/anti-re lever
301	23011362	Bail arm	800-1	28000322	Anti-reverse/anti-re lever
304	23043942	Bail arm cover	801	28010024	Anti-re lever spring
305	23050088	Kick lever	0910633	0910633	Ball bearing
307	23073736	Bail holder	0910039	0910039	Ball bearing
309	23090002	Bail arm support pin	0910051	0910051	Ball bearing
310	23100001	Compression spring	0910091	0910091	Ball bearing
313	23134096	Bail wire assy.	0910013	0910013	Ball bearing
315	23150022	Line roller	0910015	0910015	Ball bearing
318	23180005	Rotor nut	0910215	0910215	Ball bearing
400	240012332	Spool assy.	0920376	0920376	Washer
405	24050031	Drag washer retainer	0920150	0920150	Washer
407	24070009	Extension spring	0920540	0920540	Washer
412-1	24120022	Spool bushing	0930058	0930058	Screw
413	24130003	Waterproof retainer	0930171	0930171	Screw
500	25004421	Handle assy.	0930471	0930471	Screw
504	25040004	Handle screw cap washer	09301263	09301263	Screw
513	25130174	Handle cap	0930643	0930643	Screw
600	26004062	Drag knob	0930538	0930538	Screw
610	26100049	Drag washer	0930840	0930840	Screw
611	26110018	Eared washer	0930663	0930663	Screw
612	26120042	Key washer	0930575	0930575	Screw
612-2	26120043	Key washer	0930626	0930626	Screw
612-1	26120054	Key washer	09301016	09301016	Screw
700	27000322	Drive gear	0930055	0930055	Screw
702	27020872	Pinion gear	09301491	09301491	Screw
705	27050105	Transmission gear	0930431	0930431	Screw
708	27080095	Oscillating slider			